


To set up two way audio you must have an active (powered) microphone and external speakers, and a PC with a microphone and speakers.  
The DVR has BNC connections as shown on the rear of the DVR you may have to use adaptors to adapt this to you microphone and speaker connectors.

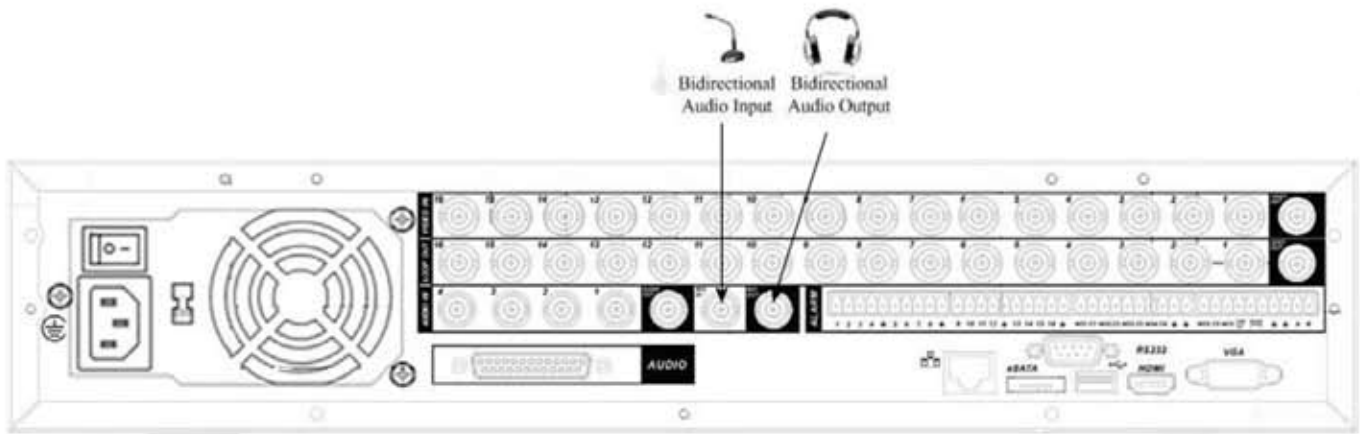

Next Log into the DVR using IE8 or the Professional Surveillance Software and Right mouse click on an Image then hover the mouse over Talk Audio Format and Select G711a.

Now with two way audio activated when you speak into your PC the microphone output should be audible at the speakers connected to the DVR.

When speaking into the Microphone at the DVR the DVR's Microphone output should be audible at the PC.

